Operation

- · This unit works in maintained mode. The fitting can be switched separately on or off. The unit will charge automatically (LED is green). A single LED remains on when the supply is interrupted.
- · Locate the flying lead on the inverter and plug into the connector.
- · Replace fuse or circuit breaker and switch on. Ensure that the source is mains (240V \sim 50Hz).
- Verify that the Green LED is illuminated; this confirms that the batteries are charging.

- Charge the battery for at least 16 hours before first use.
- If the LED is not illuminated then there may be no a.c. supply, the battery has not been connected properly or the internal circuit may have failed.
- · The battery should be re-charged and checked every three months.
- The battery should be discharged and the duration of the lamp in emergency mode checked every six months.

Battery Replacement

- If after routine operation check, the lamp does not remain lit for the set period, a new battery may be required.
- · Switch off the electricity at the mains, allow batteries to fully discharge then reconnect to supply and allow to charge for 24 hours.
- · Test again for two hours, if light does not remain lit change the inverter / battery unit as follows:
- Obtain a replacement battery / inverter unit. make a note

of the wiring, and remove from plate and refit the new

- Perform full operation check and update test record.
- Refit the shade. Ensure that the seal is correctly located.
- Restore power and allow to charge for at least 16 hours.

Fitting/replacing bulbs

. This system contains non-replaceable parts and cannot be serviced. If damage occurs the part should be

scrapped.

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish.

Recycling advice



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Safety information

For your safety, always switch off the supply before cleaning.

Instruction leaflet

Vigor EM LED Bulkhead



CE



Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference

Warning

This is a Class 1 product and must be earthed.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with IEE Wiring regulations and current Building Regulations.

To prevent electrocution switch off at mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge. If you are in any doubt, please consult a qualified electrician.

This light fitting should be connected to a circuit with a 30mA RCD fitted.

If replacing an existing fitting, make a careful note of the connections.

This system contains non-replaceable parts and cannot be serviced. If damage occurs the part should be scrapped.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice

This product is rated at IP44.

This product is not suitable for dimming.

These products should not be fitted to PIR circuits or short duration timed switches as these fittings have their own sensor for this purpose.

Specification

: 240V ~ 50Hz Voltage

: 16W SMD 5630 LED's Lamp

IP rating : 44

: 120lm in EM mode Lumens : 3-4 hours (180 -240 Duration

Operating Temperature : 10°C to 50°C

Maximum Operating Humidity: 90%

Change over Time : Approximately 1s **Battery Specification** : Lithium (1300mAh) Battery Charge Time : More than 15 hours

minutes).

Layout

- Plan the desired layout of this fitting carefully, ensuring the cables will reach the distance between the junction box and the light fitting.
- · Avoid locating any cables in positions that would cause a hazard. Position cables and junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.
- The mains supply cable must have a minimum cross sectional area of 1.0mm².
- Cables must be protected using suitable conduit or plastic trunking.
- The products can be wall or ceiling mounted. If wall mounting ensure that the power supply is at the bottom.

Installation

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.


- Unscrew the shade and set aside.
- Hold the product in place and mark the position of the holes.
- Ensure the wall is capable of holding the weight of the product, or if fitting to a ceiling, ensure there is a joist at the point of fixing to support the weight of the product. Take care to avoid damaging any concealed

- wiring and pipes. The correct fixings should be used for brick, cavity walls or plasterboard.
- · Pierce a hole in the grommet, and pull the cable through.
- Fix into position.
- · Wire as detailed below

Wiring

Having correctly identified the wiring from your existing light fitting, connect to the connection block inside the product in

the following way:

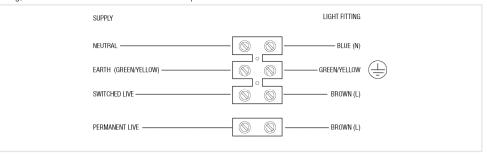

Check that...

- · You have correctly identified the wires
- · The connections are tight

 No loose strands have been left out of the connection block

Commissioning

- Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.
- · Refit the shade, ensuring that the seals are correctly
- located.

· Replace fuse or circuit breaker and switch on. Your light is now ready for use.

Microwave Movement Sensor

 This product is fitted with a microwave movement sensor. Please see the additional instruction leaflet for detailed operating instructions. Please note that the sensor is already installed inside the product.