# INSTRUCTIONS AlvaLED GUI0 Spike Light – 240v

All finishes



### **WARNINGS**

# PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO INSTALLATION / MAINTENANCE



- If a fitting is found to be damaged, cease use immediately.
- This is a Class I product and must be earthed.
- This unit must be fitted by a competent person if in doubt consult a qualified electrician.
- Install in accordance with IEE wiring regulations and current Building Regulations.
- To prevent electrocution, switch off mains supply before installing or maintaining this fitting. Ensure other persons
  cannot restore the electrical supply without your knowledge.
- This light fitting should be connected to a circuit with a 30Ma RCD fitted.
- If replacing an existing fitting, make a careful note of the connections.
- When changing the bulb, always switch off at the mains & allow the bulb to cool before handling LAMP WILL GET HOT WHEN IN USE.
- All connections should be made as watertight as possible to avoid electrical shortage.
- Always use the correct type & wattage of bulb. Never exceed the wattage stated.
- The unit may get warm whilst on for a period of time.
- DO NOT INSTALL INTO THE GROUND BY PUSHING THE HEAD OF THE PRODUCT

Voltage: 220 - 240v 50Hz Max Wattage: 20w Bulb Holder: GU10 IP Rating: IP65

Cable Length: 3 core rubber cable 0.75mm (approx. Im)

Head: Adjustable


Materials: Aluminium & Tempered Glass

Finishes: Black (Powder Coated) / Titanium & Cocoa (Anodised)

Mount: Spike Mount or Surface Mount

Additional accessories available - sold separately

# See website for more details

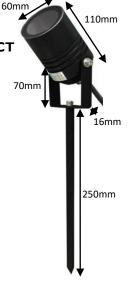

## SILICA GEL & O-RINGS (DO NOT REMOVE):

A small pack of silica gel has been included with this spike light, which is to be located inside the head with the bulb holder. This should **not** be removed. Condensation inside the spike light is inevitable due to the heat generated from lamps and cold weather conditions, especially if installed on a damp day. The pack of silica gel will collect the moisture inside the fitting, preventing this. It is recommended that the silica gel is replaced when the light bulb is replaced, if not before, and the white rubber o-ring checked. This fitting should not be used if there are any signs of damage.

### **CLEANING:**

Occasional cleaning and care is recommended for this product. Please refer to our website for the best way to clean different materials.

### **RETURNS & DISPOSAL:**

If purchased from a 3rd party, please contact your supplier.

If purchased direct, contact us by phone or email:

Exterior Lights UK Ltd, P.O. Box 794, Orpington, Kent. BR6 IFB.

Tel: +44 1689 606342 Email: sales@exteriorlights.co.uk

### Our full returns policy is available on our website.


Waste Electrical Products should not be disposed of with household waste. Please check with your local authority or contact us for more information. Please recycle packaging wherever possible.

Producer Registration Number: WEE/KC3440XY

Always use a waterproof Junction Box or Tubecon Connector to connect the fitting to the mains power supply.

IMPORTANT: Cable should be laid inside armoured conduit or piping to protect from water-logging, chemicals found in soil and damage. If buried, it should be buried to at least 0.5m below ground to reduce damage risk. If this method is not used, cable warranty will be void.

- **1.** Decide on the positioning of the spike light. See below for mounting installation.
- 2. Locate the mains electrical supply (pre-installed armoured cable).
- **3.** Connect the fitting to the mains supply via a waterproof junction box or Tubecon connector (see diagram A for wiring information).
- **4.** Ensure all terminals of the connector block are secure with no stray wires and that the connection is watertight.
- **5.** Cable supplied with fitting is not armoured, therefore it should be laid inside armoured conduit or hooked up safely out of reach in protective piping.
- **6.** Install lamp (see below).
- 7. Once fully installed, turn on the mains power.

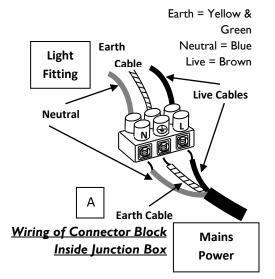

### **SPIKE MOUNTING:**

- 1. Tilt the spotlight head to create plenty of room between the head and bracket (see below).
- 2. Remove the socket screw from the ground spike with the allen key provided.
- 3. Place the spike underneath the U bracket, lining up with the predrilled / threaded holes.
- **4.** Secure the spike to the bracket with the socket screw / washer by hand, then tighten fully with the allen key provided (image B). **TIP:** for ease of tightening (due to little clearing for the allen key) hold the socket screw securely with the allen key and turn the spike to tighten.
- 5. Dampen the ground in the area where the fitting is to be installed.
- **6.** Carefully, push the spike into the ground to the desired depth with the base of the U bracket. Do **NOT** put pressure on the spotlight head.
- 7. Gently compact the earth around the spike to ensure the spike is mounted firmly in the ground and does not move from side to side.

### **SURFACE MOUNTING:**


- 1. Remove the spotlight head to release the U Bracket.
- 2. Hold the bracket in position and mark the desired location for mounting (the head can be fully removed if required).
- 3. Attach the bracket to the surface with the relevant screws / washers for the material (not supplied) see image C.
- 4. Reattach the head, as per image D.
- Adjust the head to the desired position and secure by tightening the 2 x socket screws on each side of the U Bracket.



### **ADJUSTING THE SPOTLIGHT HEAD:**

The head can be adjusted and set at various angles via the U Bracket. If this is too secure to adjust, follow the following steps:

- 1. Support the head and slightly loosen the 2 x socket screws found on each side of the U Bracket using the allen key provided by turning anti-clockwise one turn should be enough to allow the head to move up and down (do not fully remove).
- 2. Angle the head in the desired position and tighten the loosened screws to secure in place.
- If a screw becomes fully removed, return into the outer side of the bracket with a washer on each side as per image (D).

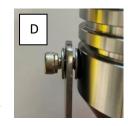

### **INSTALLING / CHANGING LAMP:**

- Unscrew the cap of the spotlight by hand (anti-clockwise).
- Push in the GUI0 using a push and twist action (clockwise) note the bulb holder will be greased.
- Ensure silica gel pack is present (change if damp).
- Ensure o-ring is present on the male thread of the body and is not twisted.
- Replace cap and tighten securely by hand (clockwise).