# EXTRUSION
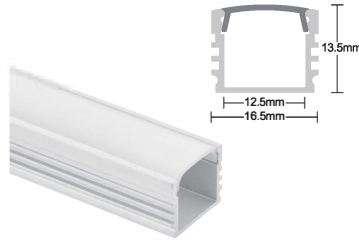
80497, 80498, 80499, 80500, 80501, 94946, 94947, 94948, 94949
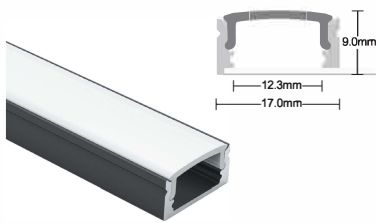
9.0mm
12.3mm
17.0mm

**80497**
Surface profile-slim

13.5mm
12.5mm
16.5mm

**80498**
Surface profile

13.4mm
12.5mm
15.2mm
23.1mm
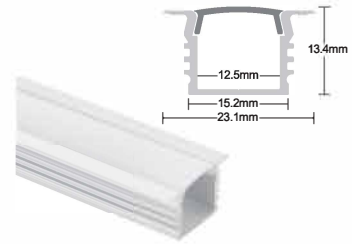
**80499**
Recessed profile

9.0mm
12.3mm
17.0mm

**94946**
Surface profile-slim black

11.0mm
16.0mm
16.0mm
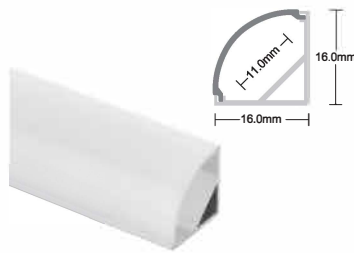
**80501**
Corner profile

56.9mm
15.4mm
12.2mm
16.9mm
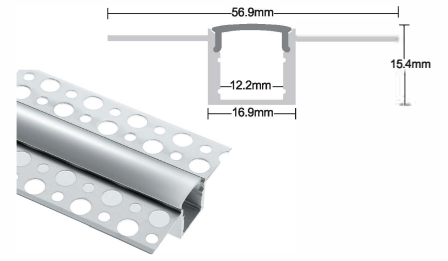
**80500**
Plaster-in profile

21.7mm
6.0mm
11.3mm
16.0mm
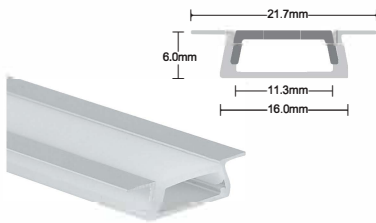
**94947**
Recessed-slim

64.0mm
14.0mm
21.7mm
27.0mm
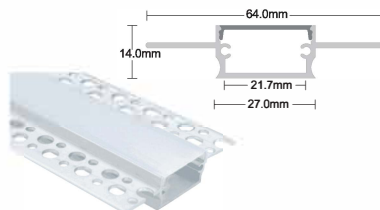
**94948**
Plaster-in wide

100.0mm
19.6mm
12.2mm
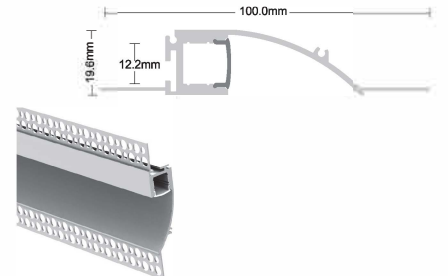
**94949**
Wall flange plaster-in

Thank you for purchasing this accessory. Please read the instruction carefully before use to ensure safe and satisfactory operation of this product. Please retain these instruction for future reference.

## Specification

Dimensions:
80497: 2000mm x 17mm x 9mm     80498: 2000mm x 16.5mm x 13.5mm     80499: 2000mm x 23.1mm x 13.4mm

94946: 2000mm x 17mm x 9mm     80501: 2000mm x 16mm x 16mm     80500: 2000mm x 56.9mm x 15.4mm

94947: 2000mm x 21.7mm x 6mm     94948: 2000mm x 64mm x 14mm     94949: 2000mm x 100mm x 19.6mm

## Please Note

• These profiles are designed for use with the following LED kits:

79315 : Trocken Tape 5m IP20 3000K     79316 : Trocken Tape 5m IP20 4000K     79317 : Regen Tape 5m IP65 3300K     79318 : Regen Tape 5m IP65 4000K

• Please check other LED module dimensions before installing into these profiles.

### Installation for 80497/80498/80499/80501/94946/94947

• Choose an ideal place to mount the profile.

• Remove the 4 brackets from the fixing pack.

• Using the brackets as templates, mark and drill the position of the fixing holes.

• Ensure the mounting structure is capable of holding the weight of the product. Take care to avoid damaging any concealed wiring and pipes.

• Attach both brackets to the chosen mounting surface using the provided screws.

• Remove the backing off of the chosen LED module strip and stick down inside the aluminium profile.

• Attach diffuser to the profile, sliding into the profile grooves.

• Place end caps onto the ends of the fitting.

• Push profile onto the brackets to secure.

• Your fitting is now ready for use.

### Installation for 80500/94948/94949

• Using the aluminium profile as templates, mark and drill the position of the fixing holes.

• Ensure the mounting structure is capable of holding the weight of the product. Take care to avoid damaging any concealed wiring and pipes.

• Remove the backing off of the chosen LED module strip and stick down inside the aluminium profile.

• Attach diffuser to the profile, sliding into the profile grooves.

• Place end caps onto the ends of the fitting.

• Push the aluminum profile into the existing groove.

• Then use screws to fix the aluminum profile to the wall

• Cemented the sides of the aluminum profile.

80497 / 80498 / 94946

80499 / 94947

80501

80500 / 94948

94949
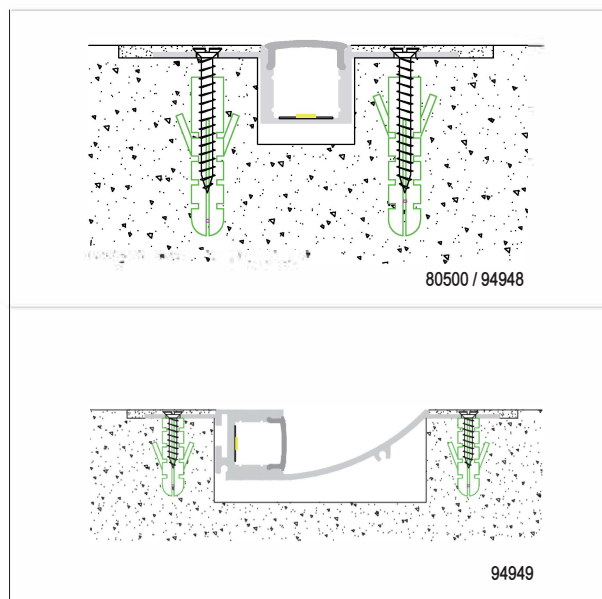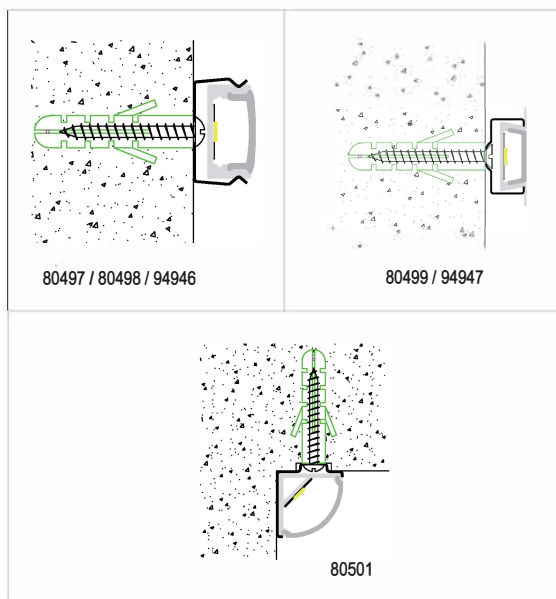
* Product images may vary.

## Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish.
For your safety, always switch off the power supply before changing lightbulbs, or cleaning.

CE

V2 25/11/2020